

The **Coping Foot** for freehanding with the jigsaw fits the following tools:

AEG

Bosch

1581 screwdriver blade lock
1582 screwdriver blade lock
1584 click knob blade lock
1587 click knob blade lock
470 front lever blade release
365
260
572
120 12 volt

DOES NOT FIT 1590, 1591 front lever blade release WITH COOL BLOCKS RUBBING BLADE

DeWalt

318 hex key blade lock
321 click knob blade lock
323 click knob blade lock
331 finger guard on base

Festool

300 and model previous to the 300
We now have foots for the Carvex but point out that the cost is double due to parts and labor

Milwaukee

6268
6266
6256
M12 (with slightly increased blade slot)
M18

Makita

4341
4351 barrel
4350 handle
cordless

Metabo

All models

Rigid does not fit Fuego

Hilti

Hitachi

Many of the saws on this list are now equipped with a wire finger guard that prevents the operator from getting fingers between the saw body and the base. If the guard interferes with the installation of a Coping Foot you may choose to move it according to your own ingenuity. *Understand that it will void any claims against the manufacturer for injuries caused by its absence or alteration.*

Power tools are dangerous in the hands of an unskilled person. To develop skill in the use of a free-handing jigsaw, clamp the stock to the bench and go slowly at first using both hands on the saw for control and for personal protection.

Although the Coping Foot can be installed on many battery powered saws, they are not recommended for the simple reason that battery powered tools can not be locked on.

The **Coping Foot** fits some home-owner saws although they may not be suited for coping.

New models are coming out constantly. Call us if your saw is not on this list.